



1 configure PC IP address to 192.168.10.100, 255.255.255.0

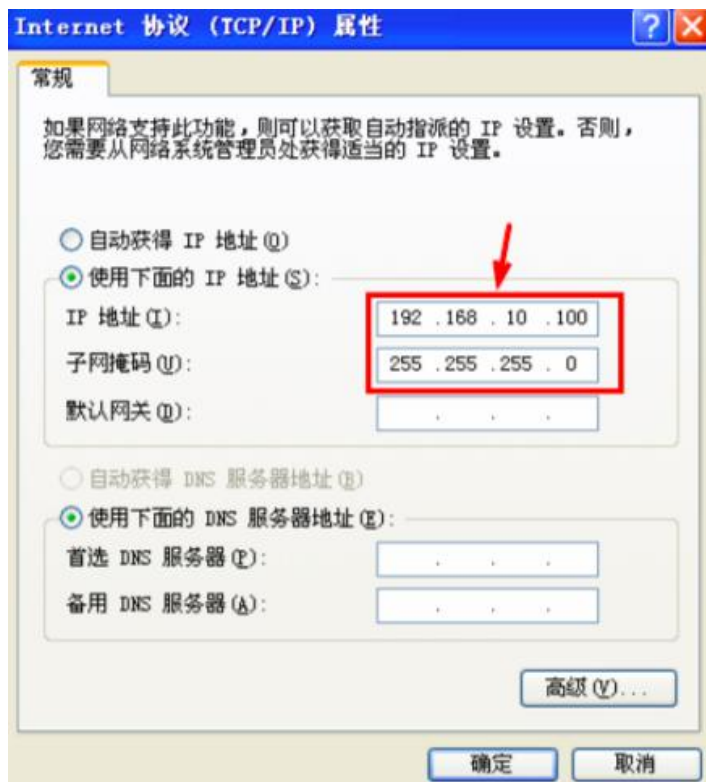


2. connect IP phone Lan port with PC, and IP Phone reboot, when reboot process, press "#" and hold and release it until IP Phone entry " Post Mode"

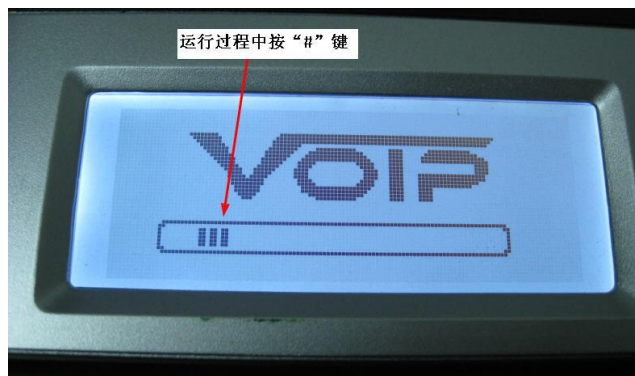

3. Back to PC, Ctrl +R and




4. text telnet 192.168.10.1 and then press Enter

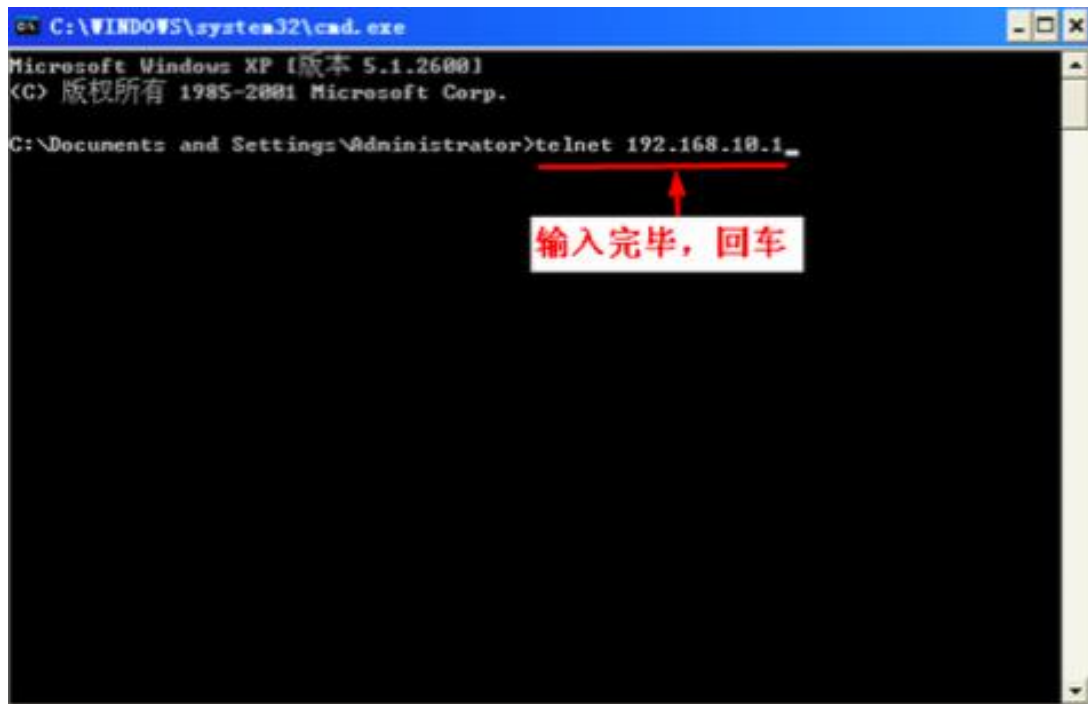

5. After step 4, PC will entry IP Phone post, then text“ m” and enter.
And then input password `ucidt^sz@mxx_sz` and press Enter

Start to input new Mac

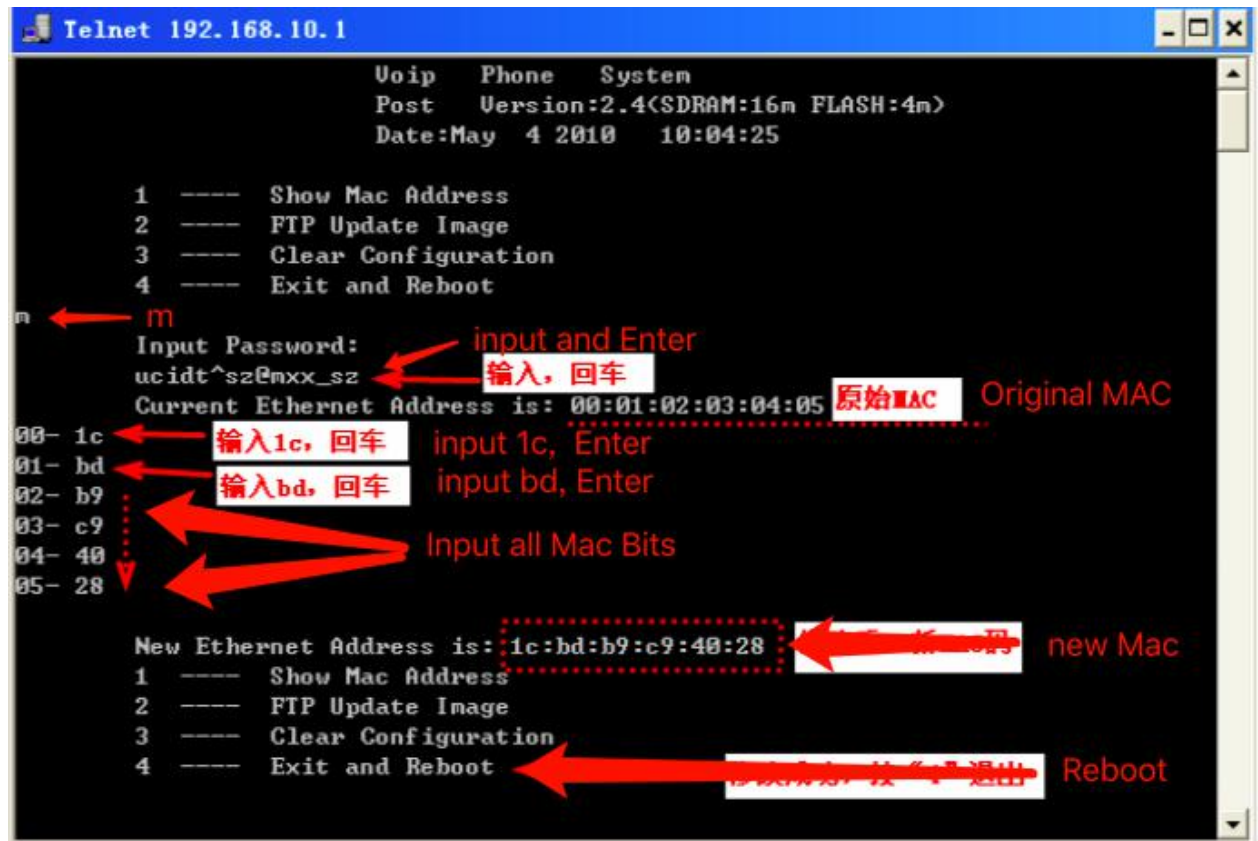

After Reboot, then new Mac is changed.

6. Open IE browser, input 192.168.10.1 and enter. Then log in Fanvil web GUI, (user name and pass word are “ admin”)

7. After enter web GUI, select WAN—Network, input invalid MAC provided by Fanvil, then Apply

8. After Step7. Reboot IP Phone and log in WEB GUI to Recheck Mac

If you can't find “Mac Authenticating Code”, then MAC is successful